



1	50003500	ROTISSERIE BURNER ASSEMBLY	1
2	50003472	ROTISSERIE ELECTRODE	1
N/S	50003473	ROTISSERIE ELECTRODE WIRE	1
3	50004725	TUBE AND ORFICE ASSEMBLY - LP	1
3a	50004726	TUBE AND ORFICE ASSEMBLY - NG	1
4	50003473	ELECTRODE ROTISSERIE WIRE	1
	94D0134	ROTISSERIE KIT - w/o spit rod	1
6	20305074	ROTISSERIE MOTOR BRACKET	1
7	50000399	SUPPORT ROTISSERIE SPIT ROD	1
8	91D0131	ROTISSERIE MOTOR ONLY	1
9	50001326	SPIT ROD 38IN	1
10	30005915K	FRONT LID ASSEMBLY - SS	1
11	30005838	WARMING RACK	1
12	30005920	REAR LID ASSEMBLY	1
13	91D0132	BURNER MAIN ANGLE ASSEMBLY - INCL. ELECTRODE AND WIRE	3
15	91D0108	ELECTRODE WIRE	3
16	91D0107	ELECTRODE ONLY - MAIN	3
17	50000892	BURNER GASKET	3
18	50001300	FLASH TUBE	1
19	30005707	VC LOGO	1
20	20300394	TEMPERATURE GAUGE	1
21	50004119	CURVED HANDLE GRIP SET	1
22	50000365	LID BUMPER SET (6)	1
23	50000365	HARDWARE LID SET	1
24	30005807	CONSOLE w/RIVNUT ASSEMBLY	1

25	50004727	WIRE HARNESS	1
26	50003110	BATTERY CASE	1
27	30002788	IGNITOR PUSHBUTTON	1
28	50002533	IGNITOR PLATE	1
29	50001619	IGNITOR MODULE ASSEMBLY	1
30	50003002	BEZEL	4
32	50003984	KNOB	4
34	50004722	VALVE MANIFOLD ASSEMBLY - LP	1
34a	50004724	VALVE MANIFOLD ASSEMBLY - NG	1
35	50000672	FLEXIBLE CONNECTOR 28IN.	1
36	91D0111	HOSE REGULATOR - LP	1
37	91D0112	CONNECTOR HOSE - NG	1
38	50004736	SUPPORT GRILL / GREASE TRAY	2
39	50001955K	GREASE TRAY	1
40	50004739	REAR COVER	1
41	50004813K	GREASE TRAY FRONT ASSEMBLY	1
42	50004733	FASCIA BRACKET RIGHT	1
43	50004734	FASCIA BRACKET LEFT	1
44	20304959	HEAT PLATE	3
45	50004318	COOK GRATE	2
46	50004204	DRAWER HANDLE CURVED -128mm	1
47	50004855	HARDWARE BAG	1
48	50000198	12 FOOT HOSE - NG	1
49	20300395	BEZEL FOR TEMPERATURE GAUGE	1
N/S	20304635	CONVERSION KIT - LP TO NG	0
N/S	20304639	CONVERSION KIT - NG TO LP	0
N/S	30005801	USER MANUAL	1
N/S	20304966	ASSEMBLY MANUAL	1
N/S	20304963	PARTS LIST	1
N/S	VCS300BIC	GRILL COVER	0

©IBS
888-634-4289

©IBS
888-634-4289